





Q180

18 ga Pneumatic stapler

Parts list

Part Number	Description	Part Number	Description	Part Number	Description
101	DEFLECTOR	204	PLUNGER	407	SPACER
102	CAP	205	O - RING	408	PUSHER
103	SEAL	205A	O - RING	409	SHAFT
104	COMPRESSION SPRING	206	O - RING	410	PUSHER SPRING
105	O - RING	207	PLUNGER CAP	411	REAR PLATE
106	O - RING	208	SPRING PIN	412	LATCH
107	HD. VALVE PISTON	209	SECONDARY TRIGGER	413	LATCH PIN
108	O - RING	210	TRIGGER	414	SPRING
109	CAP SEAL	211	SPRING PIN	415	STOPPER
110	BOLT	212	SPRING PIN	416	E - CLIP
111	PISTON RING	213	SPRING	417	HEX.SOC.HD.BOLT
112	DRIVER UNIT	301	GUN BODY UNIT	418	LOCK NUT
113	O - RING	302	END CAP	419	SAFETY
114	O - RING	303	O - RING	420	LATCH SPRING
115	CYLINDER	304	AIR PLUG CAP	421	SAFETY GUIDE
116	CYLINDER BAND VALVE	305	AIR PLUG	422	MAGAZINE A
117	BUMPER	401	SCREW	423	MAGAZINE B
118	JOINT GUIDE	402	FIXED SUPPORT	424	TAP BOLT
119	BOLT	403	RELIEF PLATE	425	HAND KNOW
201	O - RING	404	PROTECTIVE CUSHION	426	BOLT
202	TRIGGER VALVE HEAD	405	COUNTER SUNK SCREW		
203	SPRING	406	DRIVER GUIDE COVER		